AUSPRINT WINDOWS WIFI SETUP GUIDE

Congratulations on your new wireless thermal printer, before continuing, please ensure that you reset your printer to factory settings by pressing the top Feed/LED button 4 times in a row. Once this is done, proceed.

Step 1. Press Here to download the Windows AUSPRINT App.

Because this driver is new and hasn't been verified by windows yet, the following steps must be taken.

Step 2. Press the download file, then press 'Keep'



Step 3. Press 'Show More'



Step 5. Press 'Keep Anyway'

4	Make sure yo AUSPRINT_S xe before yo	ou trust etup_V1.0.0.11.e u open it	
	Microsoft Defender SmartScreen couldn't verify if this file is safe because it isn't commonly downloaded. Make sure you trust the file you're downloading or its source before you open it.		
	Name: AUSPRINT_ Publisher: Unknow	Setup_V1.0.0.11.exe n	
	Show less 🔨		
	Keep anyway		
	Report this app as	safe	
	Learn more		
	Delete	Cancel	

Step 6. Press 'Open File' or open the file in your downloads.



Step 7. Follow the on-screen prompts



Step 8. Open the AUSPRINT App and press the 'Settings' icon

6

< <click connect="" here="" printer="" to="">></click>				
AUS PRINT Printer Interface Arbeiter fames, koge, and brank are property of their respective oversite the order tangents, koges, and brank dees not imply indexees of the of these names, koges, and brank dees not imply indexees of Saved Printer Presets.				
Australia Post MyPost BusinessTM Standard 100 x 150mm Labels 👘 🗸 🚽				
Speed(2/inch) Darkness(2) Invert Page				
Label Size.				
Standard 100 x 150mm Shipping Labels				
Press 'Setting'				
Upload files for printing.				
Drag and Drop or Click to Open Files Here				
Preview and Print				

Step 9. Press 'AUSPRINT PRO' > Press 'WIFI' > Press 'Back'



Step 10. Press 'Connect to a new wifi printer'



Step 11. Find and press 'LabelPrinter' in the list, then enter your WIFI Username and Password > Then press 'Connect'

🐨 AUSPRINT selec	t printer wifi –	- [×	
Wi-Fi Name(SSID):	Enter username he	re		
Wi-Fi Password:	Enter password he	re		
Printer Wi-Fi Name:	LabelPrinter		Connect	
Note:After connecting the prin	tter wifi successfully, please disconnect the printer wifi and re	connect to	the local wifi.	
	WIFI DEVICES	Ref	iresh	
chooch		conn	ected	
LabelPrinter		save	a 👘	
EXETEL C19687 50	EXETEL C19687 5G			
Belong32FA93-5G	Belong32FA93-5G			
chooch_5G-1			onnec	
Bertie's			onnec	
Telstra26E1-5G			onnec	
My Wifi-5G			onnec	
chooch_5G-2			onnec	
Pretty Fly for a Wifi			onnec	
BACK				

NOTE - If you enter the wrong details, the app will not tell you and any further steps will not work. If you put in the wrong details, press the top button on the printer 4 times to factory reset it and start the setup again.

NOTE - If you cannot see any wifi networks in the list, disconnect your wifi and connect it again. Step 12. Once your printer is connected successfully, it will print out a test page with the network information

NOTE - If nothing is printed within 3 minutes of pressing 'Connect', it means that your wifi name/password or both were incorrect.

To fix this press the top button on the printer 4 times to factory reset it and complete the setup again.

If you have attempted this at least twice and/or are sure of your details and still nothing is being printed, please contact us for support.

Step 13. Press 'Connect' next to the printer name in the list and use the AUSPRINT app to print labels wirelessly or continue further to set up the printer via Windows.

The AUSPRINTConnect -				
	Select Printer			
		Connnect to new	v wi-fi printer	
	LabelPrinter (IP:192.168.1.87)		connect	
	BACK			

PART 2 WINDOWS WIFI SETUP GUIDE

Step 1. Fully close the AUSPRINT app (Important)

Step 2. Press Here to download the Windows Wifi Tool

Step 3. Open the tool and follow the steps below



Connection	n method selection		×
	Mothed Network install 		
	◯ Usb install		
		NEXT	CANCEL

Step 4. Tick both boxes and press 'Allow Access'



Step 5. Select your printer from the list > Press 'Next'

Select lp	p Port				×
C					
¢	AUSPRINT-PRO				
[MAC Address	IP Address	Subnet Mask	GateWay	
	dc-0d-30-85-ea-fc	192, 168, 1, 209	255.255.255.0	192.168.1.1	
			NEX		

Done! Now your printer will appear under printers and scanners as a wireless printer, you can head to our website at AUSPRINT.CO/Drivers for further information on how to change settings to suit your requirements.